


BATTERY TO FUSE (RED); TO IGNITION SWITCH (RED); TO DIMMER SWITCH/HORN WIRING HARNESS (RED); TO HORN CONNECTOR (RED); TO HORN (RED); TO HORN CONNECTOR (GREEN); TO DIMMER SWITCH/HORN WIRING HARNESS (GREEN); TO DIMMER SWITCH (GREEN); TO GROUND THROUGH THE HORN BUTTON.

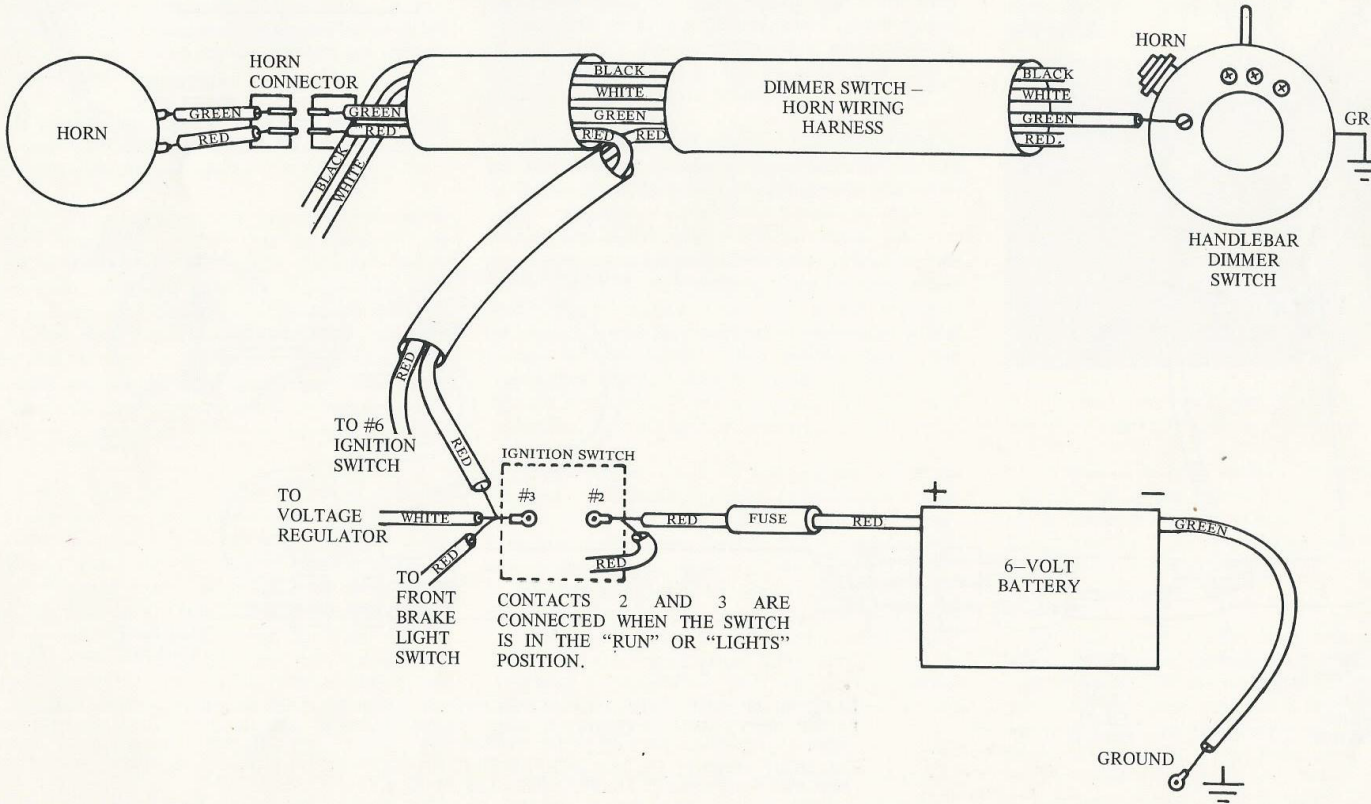

DRN

OUND